





Cedarland Lumber & Sauna Co. Ltd.

HOW TO PUT TOGETHER YOUR OWN PERGOLA

1-866-502-3327 | 519-880-9600 | 445 Conestogo Road, Waterloo, Ontario, Canada

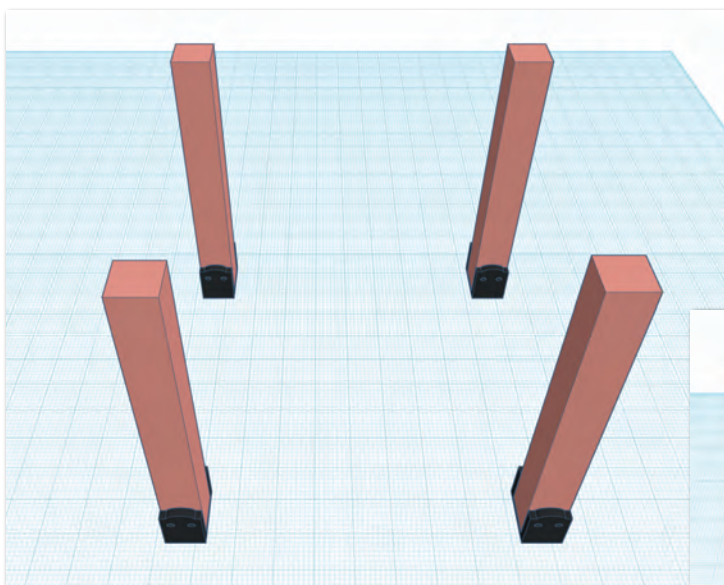

LET'S SET UP YOUR BASE

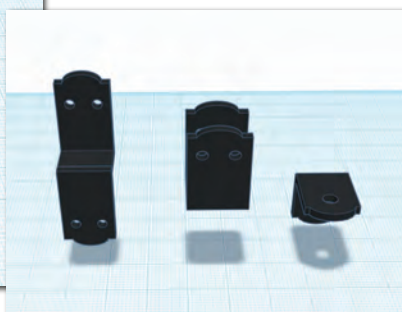

- 1.** Locate position of each post base, then drill $\frac{1}{2}$ " hole, 3" deep into concrete or stone, you will fasten the APB66 Post Base to the concrete/stone with a 3" Stainless Steel Sleeve anchor, supplied with the Pergola Kit.
- 2.** Using a hammer, gently tap the Stainless Steel Sleeve anchor, through each post base, then using a wrench or ratchet, tighten anchor in the predrilled hole in the concrete/stone.








- 3.** Using the Post to Beam connectors (APDJT2-6), position the beams, one beam on each side of the post, with the beam overhanging approximately 12" past the post (this dimension may vary slightly depending on the actual post locations). Use the 3-1/2" Black Screws, and Black Shear Nuts supplied, to fasten the beams to the posts. HINT: It is easiest to do this on the ground, and you can lay the post through the post base as a guide if required giving pretty accurate measurements. Once the first set of beams are fastened to the two 6x6 posts stand them up in place in the APB66 Post Bases. Using a level, make sure the posts are straight and level, then fasten the 3-1/2" Black Screws, and Black Shear Nuts through the Post Base holes to fasten the Post Bases to your 6x6 posts. Repeat for the second set of post and beams.



- 4.** If you prefer to install the posts first, stand them into position in the Post Bases, making sure they are level, and follow procedures above to mount the Beams to the 6x6 Posts.



NOW LET'S GET TO THE TOP

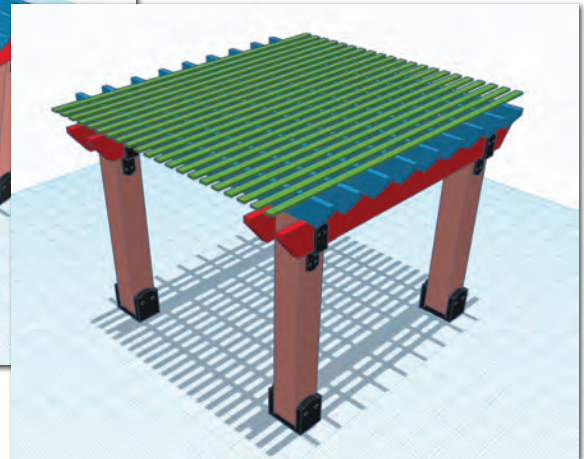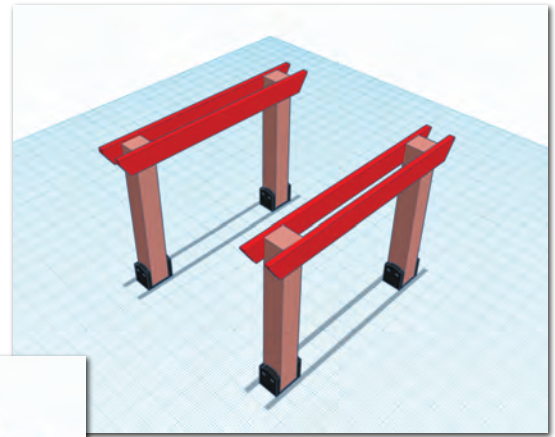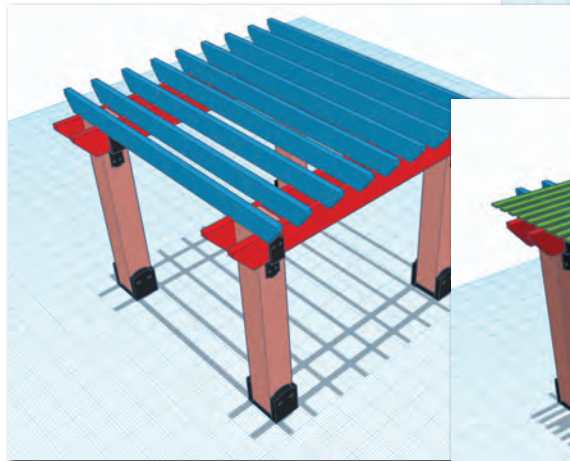

- 5.** Once you have your posts and beams up and in position, take your first rafter, and place in the centre of the beams, again with each rafter overhanging the outside beam by approximately 12". You will fasten the rafters to the beams using the APA21 Ornamental Angle (rafter tie clips) using the 1-1/2" black screws. We supply enough rafter tie clips to fasten the rafters to the beams on the outside, and inside beam so you will see the black accents inside and outside of the Pergola.





- 6.** After installing the centre rafter, continue to place the remaining rafters 12" apart on centre, they should end approximately 12" away from the end of your beams.

- 7.** Your Cedarland Pergola kit is now installed, and ready to use. If looking to increase the amount of shade on your Pergola Kit, you can add 1x4 slats on top of the rafters as shown on previous page in image #3. These are not included in our standard kit, but can be added when requested, or added after the installation if you decide you want them later. It is also recommended to protect your Pergola kit by applying a premium quality stain to prevent the cedar from turning grey, as well protecting it from our harsh Canadian weather. We highly recommend the product Sikken's Cetol 1 (now being rebranded as Sico Proluxe, 1 Primary Coat) or Timber Pro Deck And Fence. Both products are available at Cedarland Lumber.





- 8.** Thanks to the Barrie family who supplied us with the attached images of their installation, they would tell you how easy it was to install a Pergola with a Pergola Kit from Cedarland. Enjoy you Pergola!!!!



CONCLUSION

Pergolas are a great way to add a shaded area to your backyard. A cozy environment to entertain family and friends, or a quiet area to relax and enjoy a good book. Whatever your reason to add a Pergola to your backyard, at Cedarland, our Pergola Kits make installation a quick, and easy process, several options available on the sculpted ends of the beams and rafters, and all the necessary Outdoor Accents Pergola Hardware in Black, to dress up your Pergola. Our kits come complete with everything you need...except the tools.

Images provided by: Don Barrie

